

Double shockmounts



If your budget doesn't allow you to have a serious shockmount or there is nothing that fits, you can build your own, with the most affordable shockmounts.


You know what to do, when one shockmount isn't enough? - Take two!

Here is what you will need:


Two sets of these thread adapters, so you can screw them together to get these two sets of thread adapters. You may already screw them together!



Then you'll need a male/male 3/8" thread adapter and two thumbwheels. One already screwed on the threadadapter and the other we'll need a little bit later. And of course ... one or two shockmount of this kind and/or a more professional one.

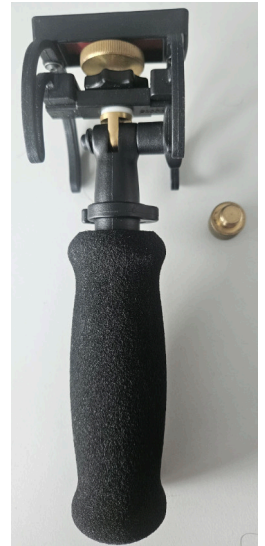

=>

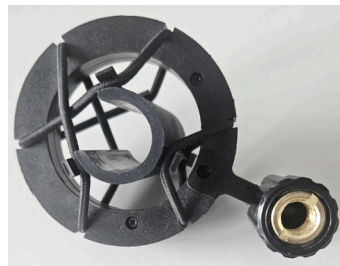

First you screw the two sets of thread adapters together and screw a male/male thread adapter plus a thumbwheel. This should look like this.



This whole thing you insert into the elastic microphone holder (spider) ...



... and screw the other thumbwheel on the other end. This way the sets are securely fasten in the elastic clamp.

If you are on a tight budget, this solution may meet your demands.



If your budget isn't too tight, this solution may be an option.



We added the Spacemic to both solutions.

We made some test recordings and really shocked it.

You'll hear something when we go to extremes. However, that was similar to riding in a car with defective bumpers on a very bumpy road.



Some tips about the elastic microphone clamps. Sometimes your local music retail store offers some quite cheap microphones. To make the appear more attractive they offer these elastic microphone clamps in a set. They are not great, but ... cheap. And if you take two of them, it's good enough.

The more professional shockmount on the left costs about 80\$. The cheap microphone clamps less than 10\$ each. So it's up to your decision and/or budget.

P.S.: This is the version 1.0 (06/26) and we are already working on an even better solution.

